


Fence Gate Part List

Part	Description	Quantity
Gate End Post	1 1/2"X1 1/2"X32 3/8"long	2
Gate Rail (drilled)	7/8"X3 1/8"X37 3/4"long	2
Gate Rail (plain)	7/8"X3 1/8"X37 3/4"long	1
Spindles	5/8"ODX22 3/8"long	8
Gate Post	1 1/2"X1 1/2"X55"long	2
Gate Support Base	Support base moldX20"long	2
Support	7/8"X3 1/8"X7 1/2"long	4
Hardware kit	Base kit hardware pack	1
Trim kit	Add-on trim kit	1
Hinge	Stanley hinge kit	2
Latch mechanism		1

SERIAL NO: 868AGG42640

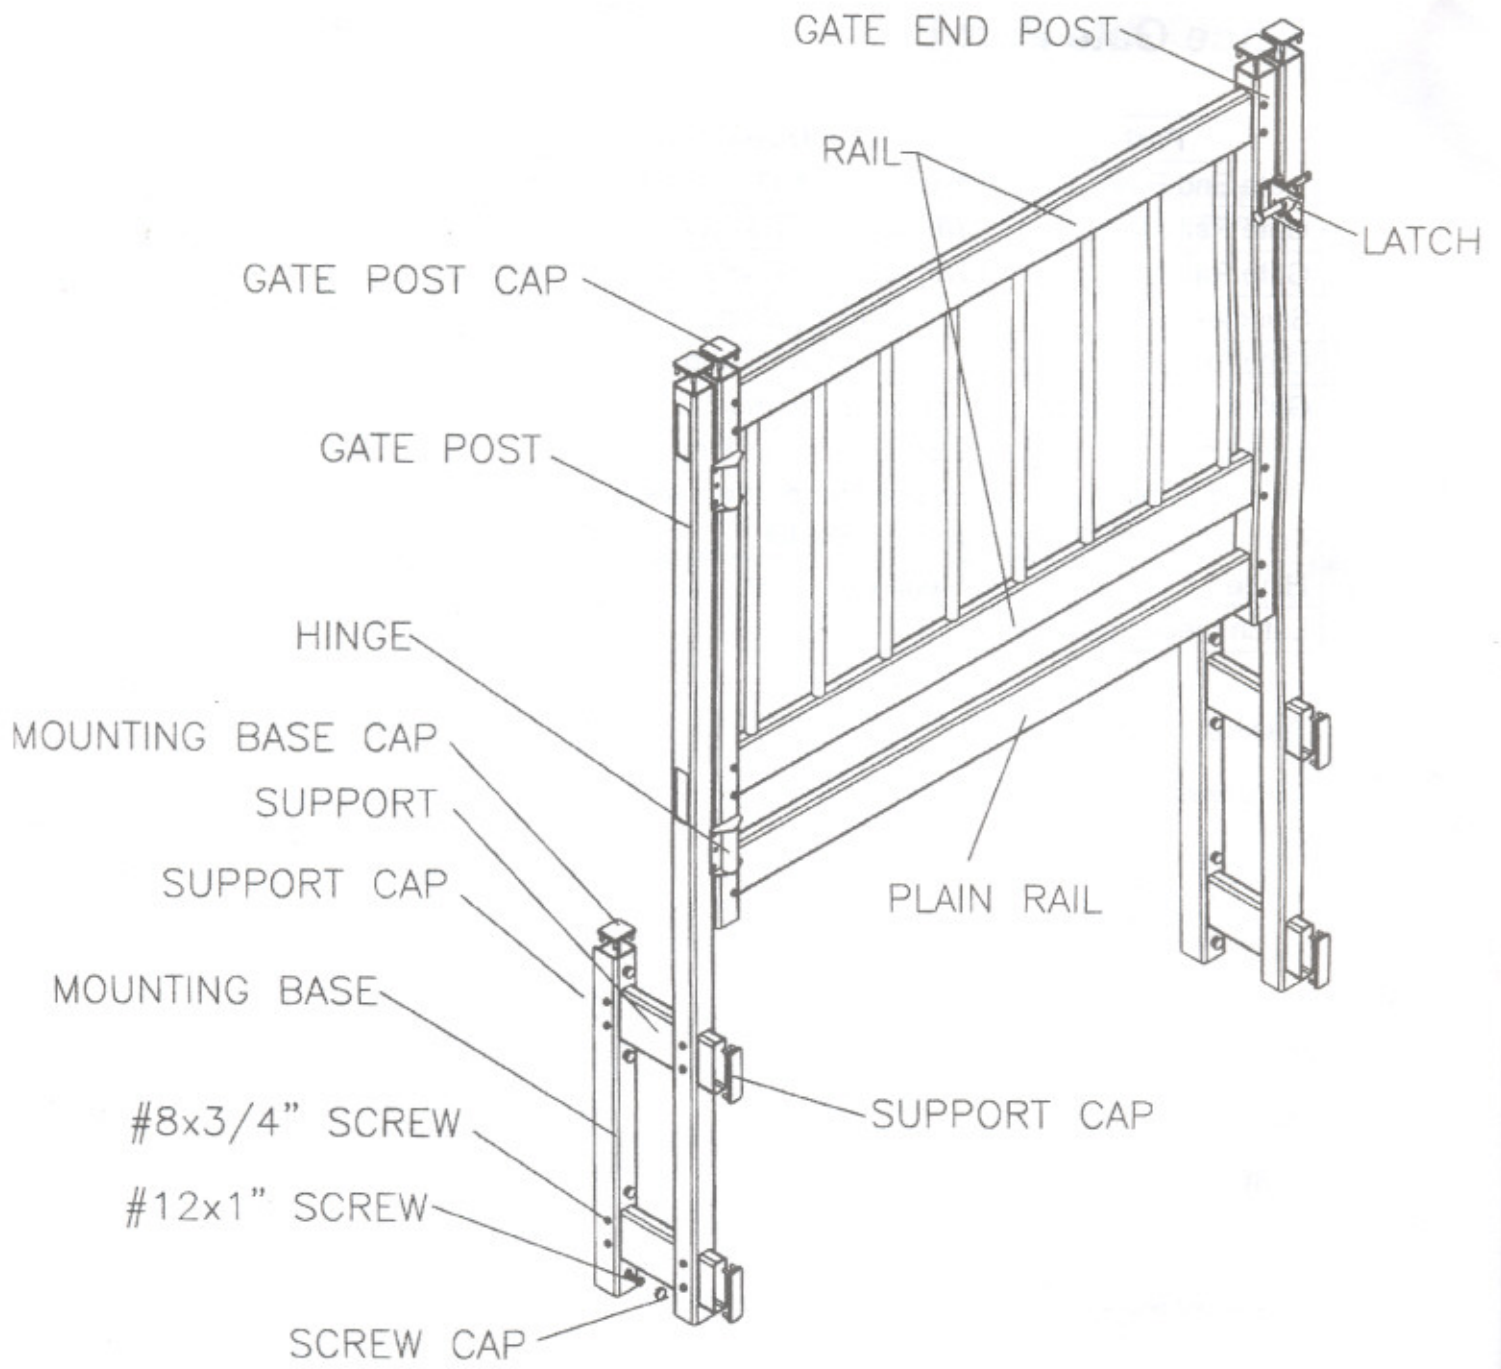

INSTALLATION INSTRUCTIONS

FOR FENCE GATE

- Step #1** Construct gate mounting bracket. Slide supports into mounting base (Diagram #1). Screw two #8 screws into both sides of each support attaching it to the mounting base. Support should be inserted flush to the backside of the mounting base.
- Step #2** Determine location of gate. Maximum width is 38". Installation of artificial upright may be required. Refer to step 2-B of Protect-A-Pool Above Ground Pool Fence Installation Instructions.
- Step #3** Install gate mounting brackets to each designated upright. If Protect-A-Pool fence has already been installed, remove one end post and support, replace with gate mounting bracket and gatepost. If fence has not been installed, follow step 8-A of Protect-A-Pool Above Ground Pool Fence Installation Instructions for installing mounting brackets using four #12X1" self-tapping screws.
- Step #4** Install gate posts (Diagram #2). Slide gateposts onto gate mounting brackets. Allow at least 1/2" between the post and the pools top cap. These will allow for easy installation of winter cover. Attach gatepost to gate mounting bracket using eight #8 screws.
- Step #5** Construction of gate (Diagram #3). Measure distance between gate support post and subtract 1/2". Cut gate rails to this measurement. Note: Cut equal amounts off each end of rail to ensure balanced spacing of spindles. Install gate rails and spindles per diagram #3, but do not attach with screws yet. Measure width of gate to be sure gate will fit between gate support posts (Diagram #4), and that gate is perfectly square. Attach gate rails to gate end posts using two #8 screws per attachment point.
- Step #6** Install gates hinges and latch per (Diagram #5). Gate should always open away from pool. Gate swing can be determined by location of hinges. First, attach hinges to gate endpost (left hand/Right hand Swing). Then attach gate assembly to gate post. Check to make sure it is flush on top and swings freely. Finally, install latch assembly.
- Step#7** Insert all caps. If necessary, use adhesive such as liquid nails to hold caps in place.

DIAGRAM #1

(WITHOUT POST)

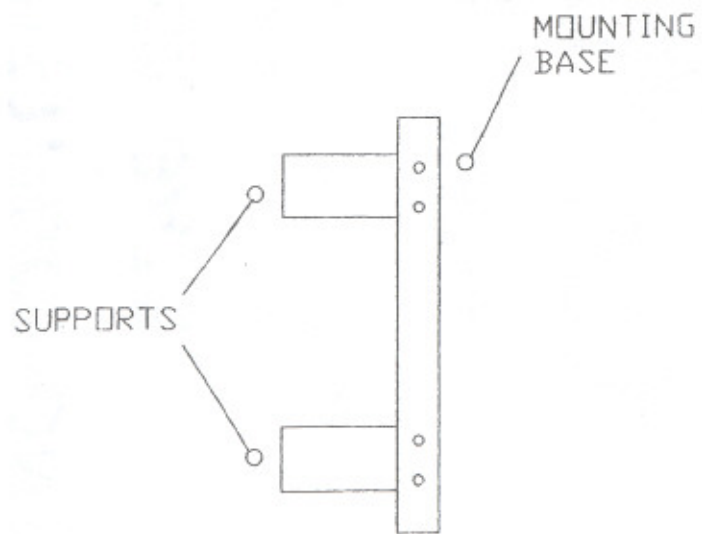


DIAGRAM #2

(GATE POST INSTALLED)

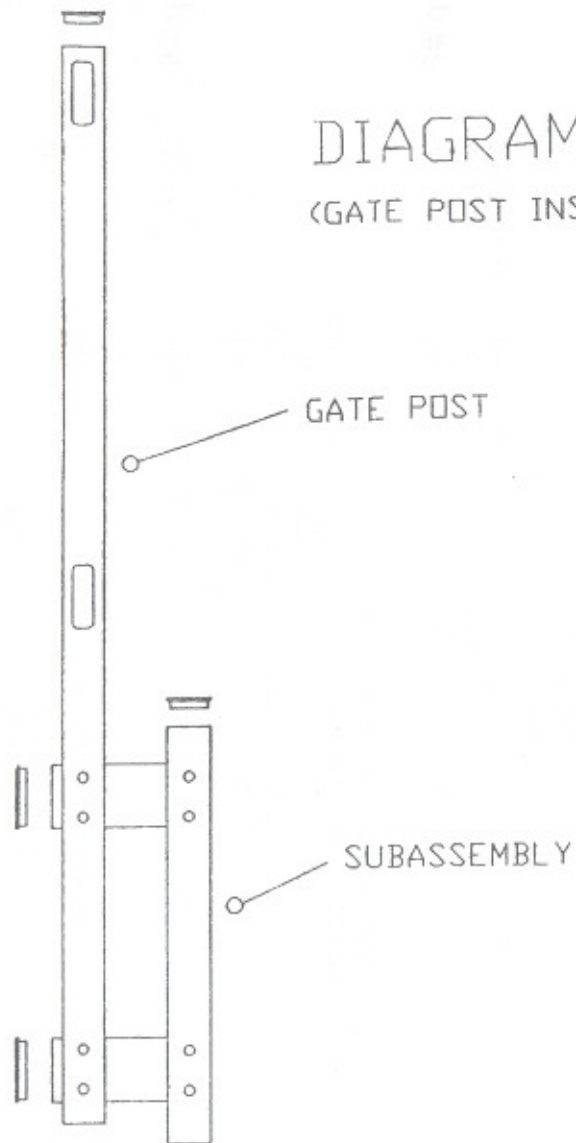


DIAGRAM #3


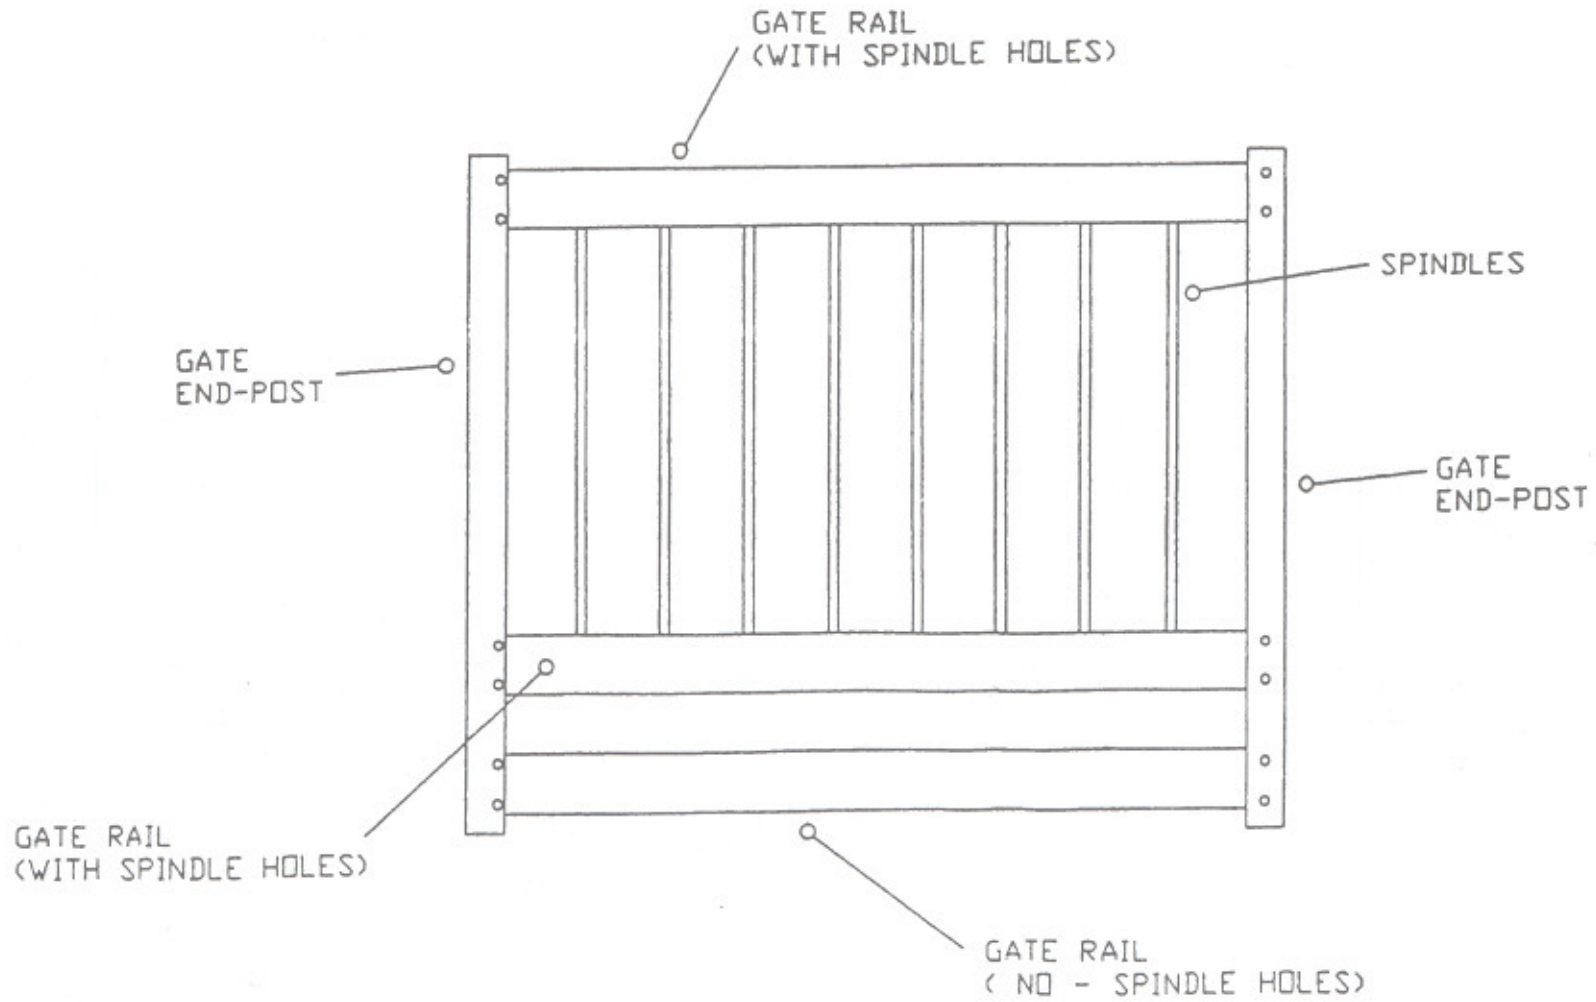



DIAGRAM #4

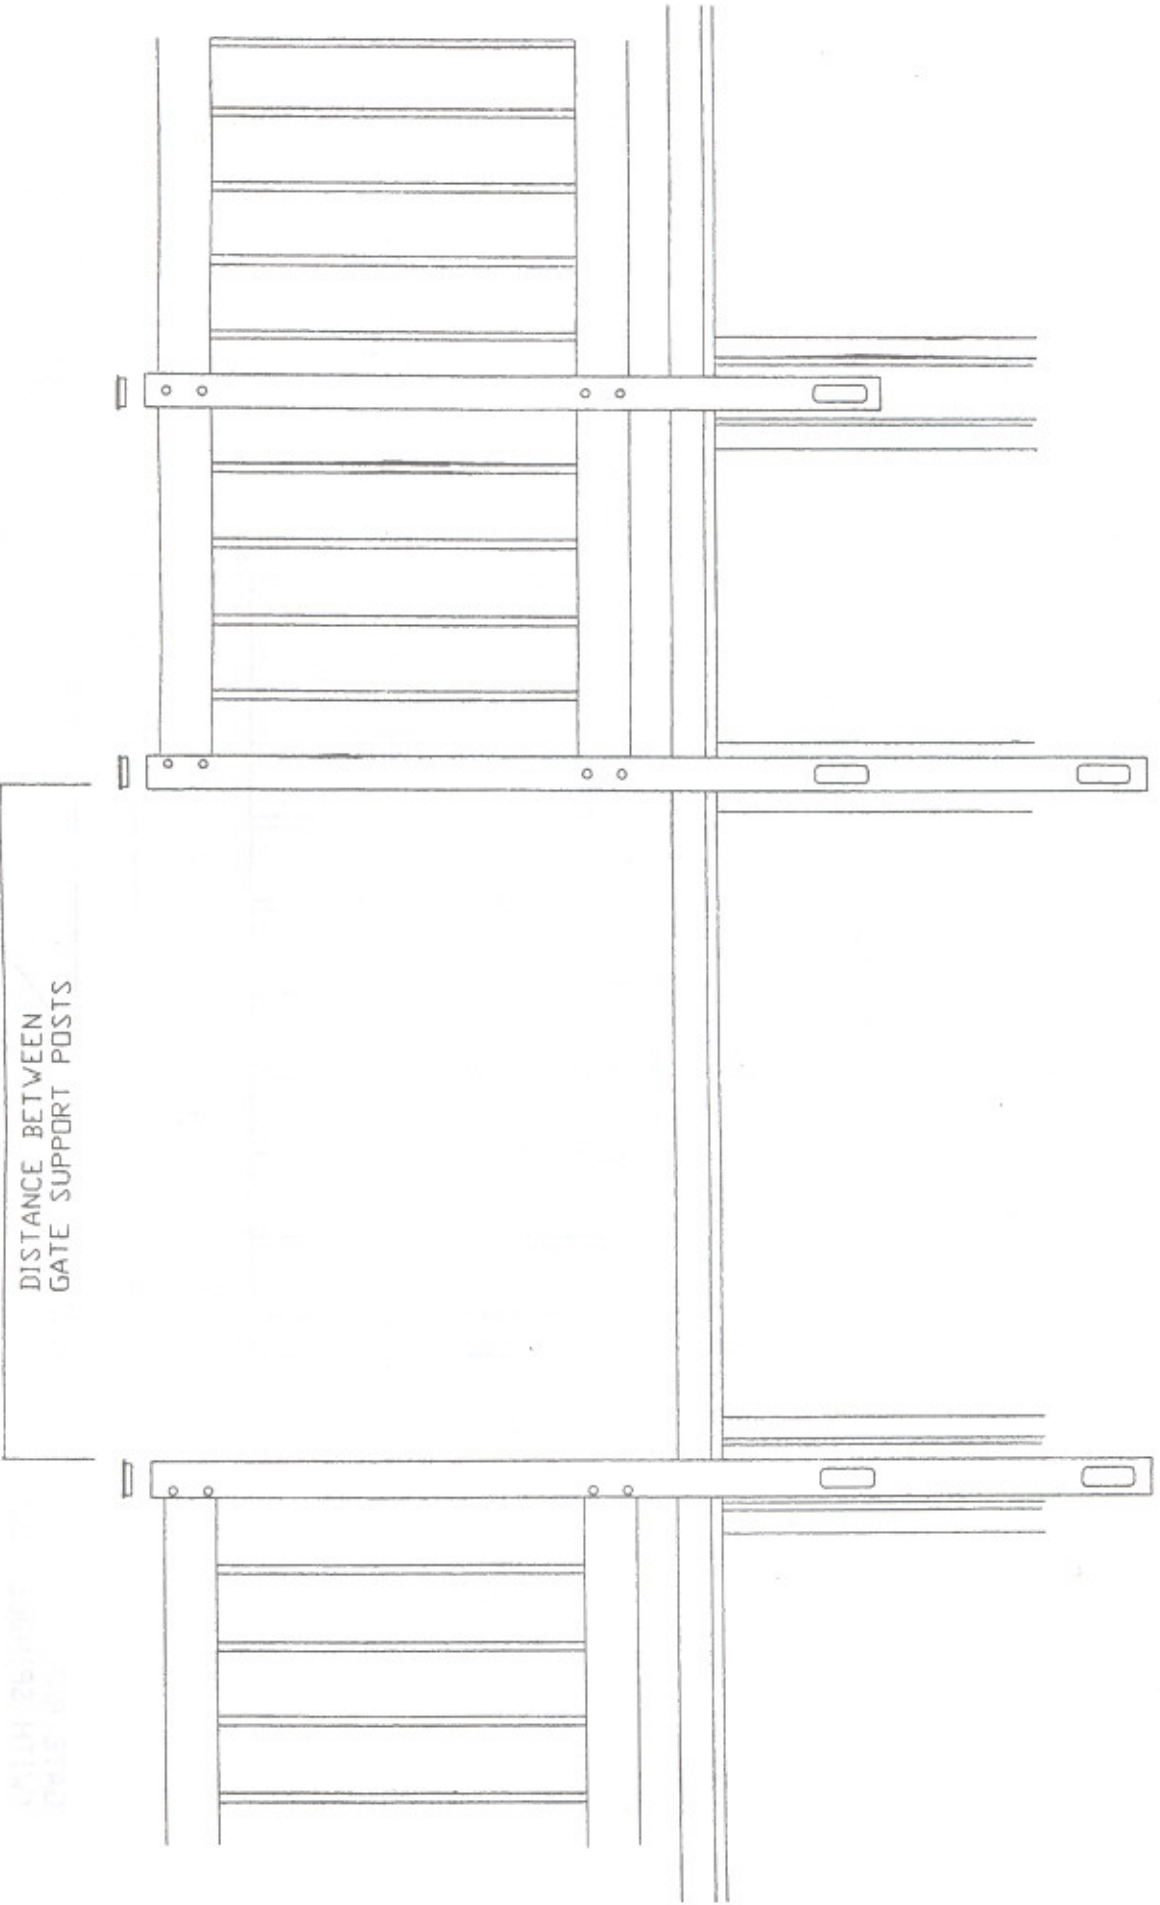

DISTANCE BETWEEN
GATE SUPPORT POSTS

WITH 25/000
DATE 1/10

DIAGRAM #5

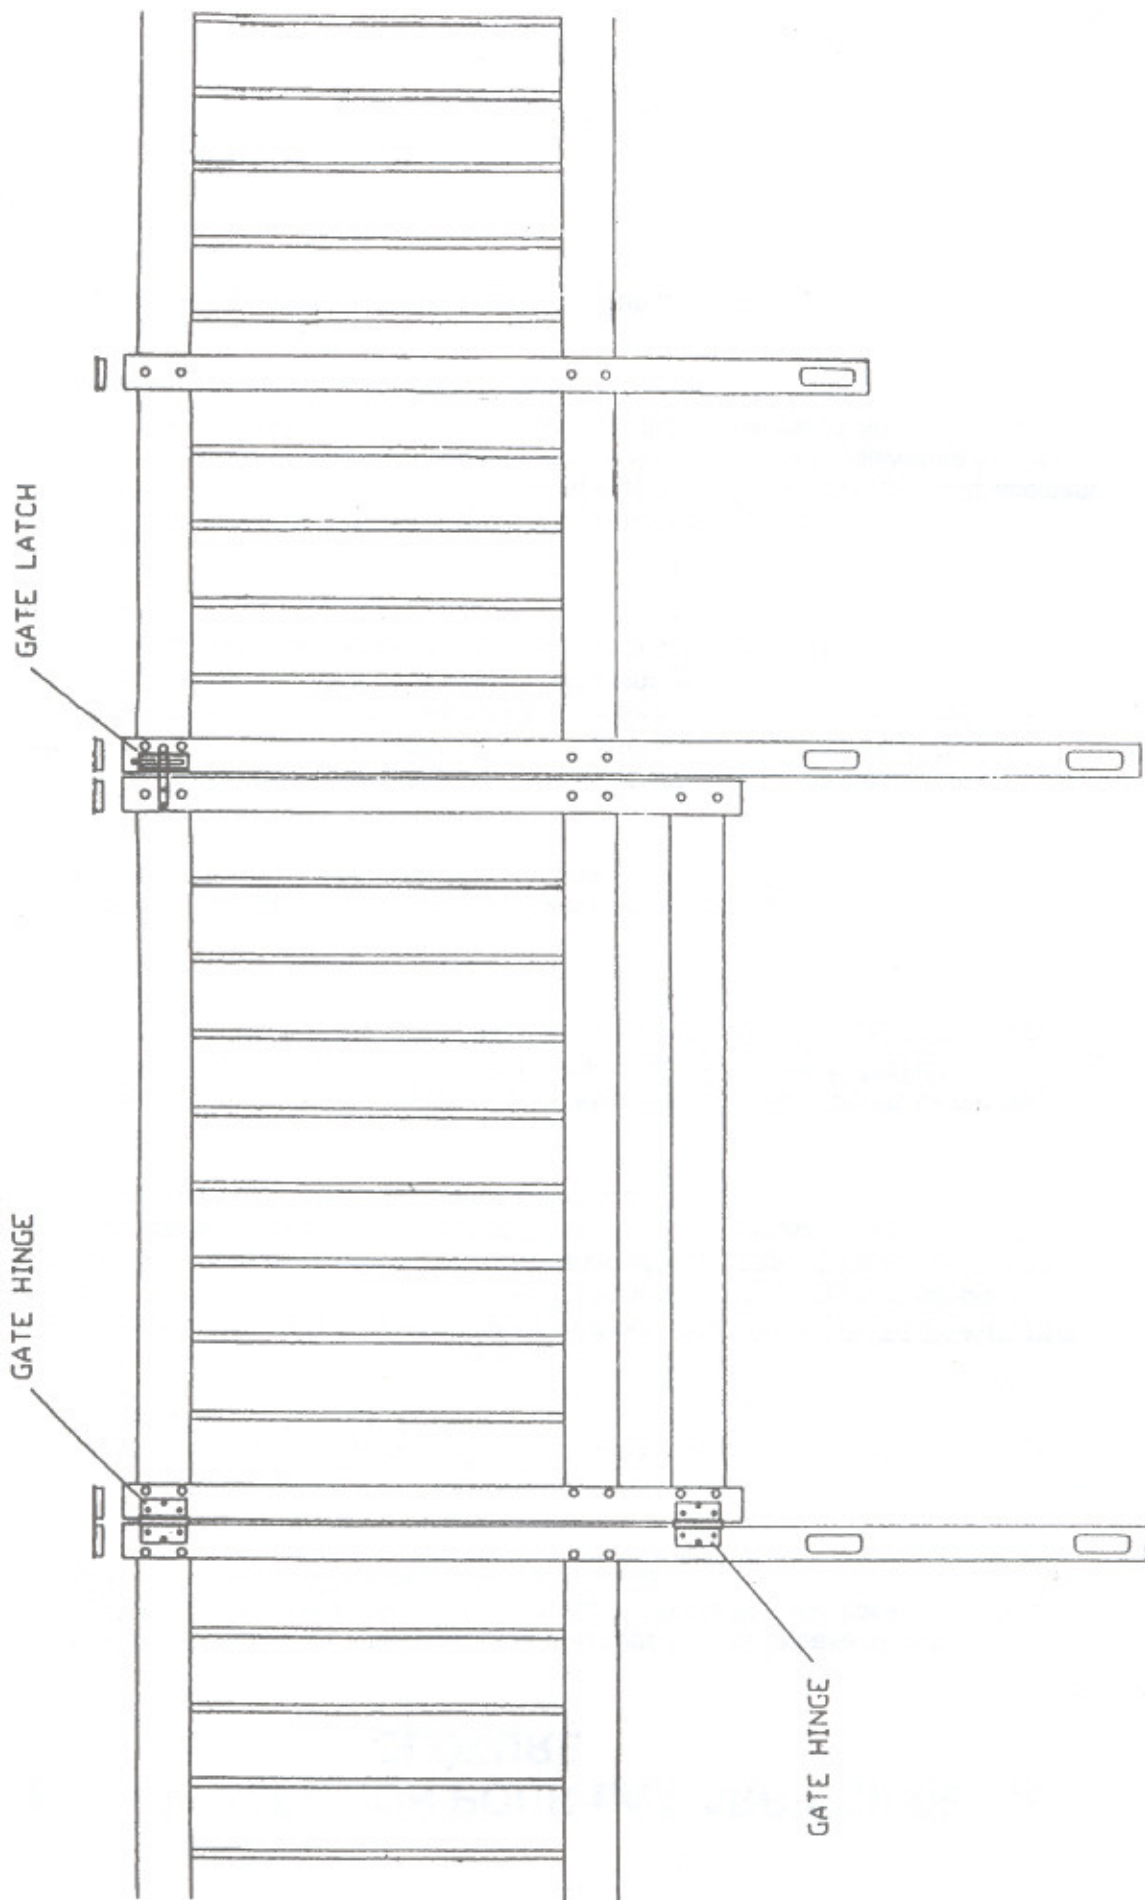

GUIDE D'INSTALLATION POUR LA BARRIÈRE DE LA CLÔTURE

ÉTAPE 1

Assemblez les supports de montage de la barrière. Glissez le support dans la base de montage (diagramme 1). Vissez deux vis #8 dans chaque côté du support pour le fixer à la base de montage. Le support doit être inséré affleurant à l'arrière de la base de montage.

ÉTAPE 2

Déterminez l'emplacement de la barrière. La largeur maximale est de 38 po. L'installation d'un montant artificiel peut être nécessaire. Consultez l'étape 2-B du guide d'installation de la clôture pour piscine hors-terre PROTECT-A-POOL^{MD}.

ÉTAPE 3

Installez les supports de montage de la barrière à chaque montant. Si la clôture PROTECT-A-POOL^{MD} est déjà installée, enlevez un des poteaux d'extrémité avec son support de montage, et remplacez-le avec le support de montage et le poteau de la barrière. Si la clôture n'est pas installée, suivez l'étape 8-A du guide d'installation de la clôture pour piscine hors-terre PROTECT-A-POOL^{MD} pour l'installation des supports de montage avec quatre vis autotaraudeuses #12 x 1".

ÉTAPE 4

Installez les poteaux de la barrière (diagramme 2). Glissez les poteaux sur les supports de montage. Laissez au moins ½ po entre le poteau et le raccord supérieur de la piscine afin de faciliter l'installation de la housse en hiver. Fixez le poteau de la barrière au support de montage avec quatre vis #8.

ÉTAPE 5

Construction de la barrière (diagramme 3). Mesurez la distance entre deux poteaux de clôture et soustrayez ½ po de cette distance. Coupez les rails de la barrière selon cette distance.

REMARQUE :

Coupez des quantités égales à chaque extrémité afin de vous assurer que les barreaux sont espacés de façon uniforme. Installez les rails de la barrière et les barreaux selon le diagramme 3, mais ne les fixez pas encore avec des vis. Mesurez la largeur de la barrière pour vous assurer qu'elle puisse être installée entre les poteaux de support de la barrière (diagramme 4) et qu'elle est parfaitement carrée. Fixez les rails de la barrière aux poteaux d'extrémité de la barrière en utilisant deux vis #8 par point d'attache.

ÉTAPE 6

Installez les charnières et le loquet de la barrière selon le (diagramme 5). La barrière doit toujours s'ouvrir en s'éloignant de la piscine. La direction de l'ouverture peut être déterminée par l'emplacement des charnières. D'abord, fixez les charnières au poteau d'extrémité de la barrière (ouverture à droite ou à gauche). Ensuite fixez la barrière au poteau de la barrière. Vérifiez qu'elle est affleurant au dessus et qu'elle s'ouvre librement. Enfin, installez le loquet.

ÉTAPE 7

Insérez tous les capuchons. Au besoin, utilisez un adhésif tel que Liquid Nails pour faire tenir les capuchons.